

# 3000 MANHOLE

## ODOR CONTROL SYSTEMS

### IMPORTANT MEASUREMENTS



**(A) Manhole Frame Diameter** (flat bearing surface that manhole lid sits on.)

*\*Measurements indicated above may be different at each location\**




**(B) Inside Frame Diameter** (Through hole)

*\*Measurements indicated above may be different at each location\**




**(C) Drop Ring Diameter** (Bottom of manhole support ring)

*\*Measurements indicated above may be different at each location\**

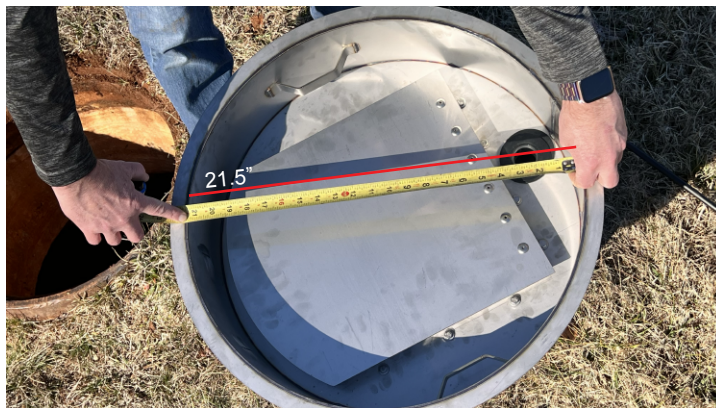

**Drop Ring Diameter (C)** Must fit inside system so the manhole lid sits flush

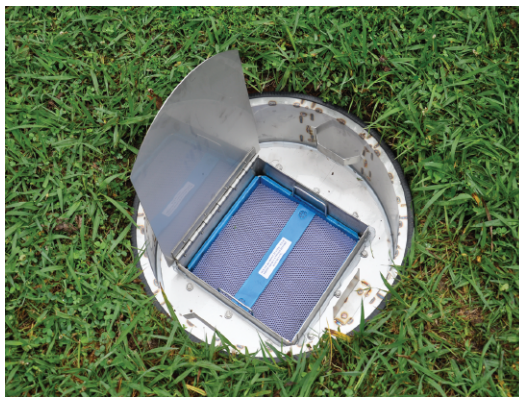

Place a bead of silicone to the flat bearing surface of the manhole before and after final installation.



**WAGER**  
C O M P A N Y

www.wagerusa.com  
336.9696909  
LWager@wagerusa.com  
Mpowers@wagerusa.com